

We have sent you

- Your roller blind
- Brackets x 2
- Screws x 4

Fix the brackets

You can fix your brackets in 3 different ways:







Face fix Top fix

Side fix

 
Sewing House

 
You will need

- Drill with the correct bit
- Metal tape measure
- Crossheaded screw driver
- Pencil
- 1. If you are fitting into a wall or lintel use a drill with a suitable sized bit to make holes where you have marked and push in rawplugs.
- 2. If you are fitting into a wooden frame you may want to make pilot holes first. You should only use a screwdriver when screwing into wood.
- 3. Hold the bracket in place and drill/screw into place, making sure it provides a strong hold.

Fitting the blind

- 1. Locate the pin end (opposite to the controls) of the blind into the centre hole in bracket.
- 2. Lift the control end of the blind and slot the rectangular lugs into the slot on the bracket

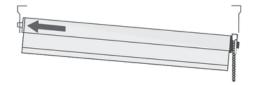

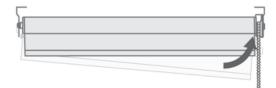

Child Safety

The chain retaining device must be installed at the maximum distance possible from the cord mechanism to prevent looped cords becoming slack.

Place the retaining device on the wall and mark the screw hole positions with a pencil.

Attach the retaining device to the wall with the fixings provided.