


How to fit your Bed Mounted Headboard

Sewing House

You will need

- Drill with the correct bit
- Metal tape measure
- Crossheaded screw driver
- Pencil

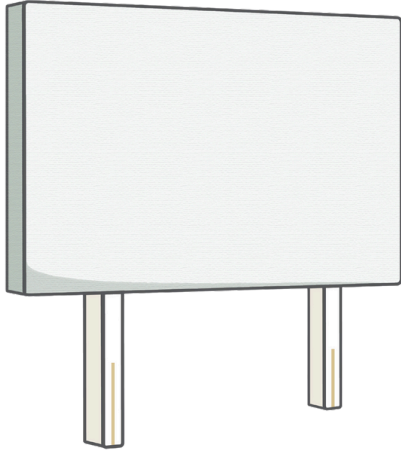

How to fit a headboard to your bed

Step 1

Make sure your headboard struts are screwed securely on the the back of the headboard.

Step 2

Find the two fixing bolts in the bed base. If you cannot find them:

- Check the foot end of the bed (it might be the wrong way round)
- Feel with the end of a screwdriver for the fixing holes as they might be covered. The bolts can also be secured in a bag stapled to the bottom of the bed.

Step 3

With the bolts attached to the bed base but screwed by about 4cm, drop the slotted struts to onto the loose bolts.

Step 4

Level up the strut so the headboard is straight and tighten the fixing bolts firmly.