

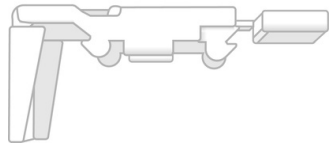


# How to fit your Roman Blind

We have sent you

*Sewing House*

- Your blind attached to a headrail
- Brackets x 2 or more
- Screws x 6 or more
- Child safety clip



You will need

- Drill with the correct bit
- Metal tape measure
- Crossheaded screw driver
- Pencil

## Fix the brackets

### Fitting inside the recess

1a. Position 1 bracket 5cm in from the left hand side of the recess and 1 bracket 5cm in from the right hand side of the recess. Mark with a pencil where the screws will go using the relevant holes in the bracket. Any additional brackets should be fitted centrally

### Fitting outside the recess

1b. Locate where you measured the top of the blind to sit, hold the bracket to that position and mark with a pencil the relevant holes where you will screw into. Make sure that the brackets will sit 5cm inside the end of the headrail. Any additional brackets should be fitted centrally.

2. If you are fitting into a wall or lintel use a drill with a suitable sized bit to make holes where you have marked and push in rawplugs.

3. If you are fitting into a wooden frame you may want to make pilot holes first. You should only use a screwdriver when screwing into wood.

4. Hold the bracket in place and drill/screw into place, making sure it provides a strong hold.

## Fixing the blind

1. Tilt and press the headrail into the brackets so that they securely click into place

2. Place the child safety clip onto the chain that operates the blind. Hold the clip onto the wall so that there is just enough slack to operate the chain easily. Screw the clip into the wall

## Top tip

The plastic covers on the Roman blind brackets are removable. Once your blind is fitted these can be taken off.